

# PREMIUM PERFORATED TRIM MASKING TAPE

- Perforated for easy application
- Lifting tab on bottom edge for quick removal
- One size fits all moldings
- Self-dispensing box



## Give Productivity a Lift!

Norton Premium Trim Masking Tape is designed to lift the molding from the surface to be painted and protect the molding from paint and overspray. Trim tape provides full paint coverage without paint “bridging” to the molding. Eliminate the cost of removing and installing moldings by simply protecting them properly during the painting process. Lifting the molding can quickly lift your productivity and profits!



### FEATURES

- Rubber-based adhesive
- Saturated crepe paper and durable plastic strip
- Two plastic strips on the roll (9mm and 11mm)
- Perforated every 40mm (1-1/2")
- No Liner
- Easy Lifting Tab

### BENEFITS

- Superior quick stick
- Easily removed without adhesive transfer
- Resists moisture and solvents
- No bleed-through
- Conforms to curved surfaces without lifting or tearing
- One size fits all
- Reduce inventory to one size
- Can double over for better support on rigid moldings
- Take just what you need for the job
- Quick application, no cutting tool needed
- Work around tight corners easily with individual pieces
- Quick application
- No waste to dispose of
- Quick removal



REVOLUTIONIZING  
REFINISHING

# PREMIUM PERFORATED TRIM MASKING TAPE



Norton Trim Masking Tape will withstand a bake cycle up to 250° F (121° C) for 40 minutes. It can withstand higher temperatures, depending upon the total time, temperature, surfaces masked and other conditions.

Trim Masking Tape should not be subjected to outdoor applications or prolonged periods of sunlight as the tape may become difficult to remove.

UPC	SIZE	PACKAGING
636425-06169	50mm x 10m (2" x 10.94 yds.)	1 per pack / 6 per case



COMPATIBLE WITH WATERBORNE


**BEST PRACTICE**



Tear off a small section to mask a tight corner. Using the perforations, tear the tape down to the plastic section and then slide in between the rubber trim and the bodywork.



To mask along a straight section, tear off a piece no longer than eight inches (20cm). Slide it under the molding and pull down evenly. Adhere the tape to the glass so that a small gap is created. Lifting the molding in this way will allow paint to flow under it. Make sure that the next piece of trim tape overlaps the last piece for complete coverage.

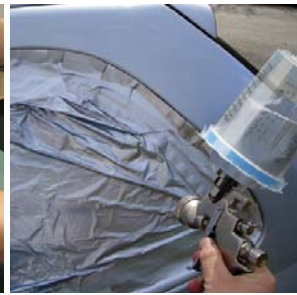

Mask as normal and paint.



Allow paint to dry and remove all the masking material.



Check edges and polish with Norton Liquid Ice if necessary.



1 888 295-5148

testdrive@saint-gobain.com

## TAKE NORTON FOR A TEST DRIVE!

Norton is 100% committed to bringing the best performing products to body shops at a fair price. You can test drive Norton products in your shop when it's convenient for you. Simply let your Norton salesperson know when you'd like to test Norton in your shop. Our test drive program allows the technicians to do their regular work, without interruption, using Norton products at no cost in "real world" conditions.

You're the final judge of performance. At the end of the day, the Norton salesperson will review the results, provide you with potential cost savings and convert the shop to Norton products if you like what you see. There has never been a better time to look at ways to increase productivity and to reduce costs at absolutely no risk to you. **Call 1 888 295-5148 to set up a Test Drive today.**



Saint-Gobain Abrasives, Inc.

USA: Telephone 1 800 456-8444

Canada: Telephone 1 800 263-6565



BETTER PERFORMANCE + BETTER PRICE = BETTER VALUE!

© Saint-Gobain Abrasives, Inc. October 2010  
The Norton logo is a registered trademark of Saint-Gobain Abrasives, Inc.

**FORM #8213**

